

## **OPERATION & PARTS MANUAL**

ITEM	PART NO.	DESCRIPTION	QTY.
1	2200	Base	1
2	2201	Lower Air Ring	1
3	2202	O Ring (Bag Seal) 5 5/8 X 1/8	1
4	2240	Air Bag	1
5	2204	Center Ring	2
6	2205	Upper Bag Ring	1
7	2205	Lower Bag Ring	1
8	2207	Low Plate Mtg. Bolts 1/4 20 X 1 1/2 cntsnk	8
9	2242	Top Plate	1
10	2243	Top Plate Mtg. Bolts 1/4 20 X 5/8 Allen	8
11	2211	Gasket	1
12	2244	Jack Pad	1
13	2213	Mtg. Bolts 3/8 16 X 5/8	3
14	2214	Spacer Ring	1
15	2215	Spacer Ring Mtg. Bolts 1/4 20 X 1 1/8	8
16	2210	Washers	8
17	2247	Inner Member #1	1
18	2248	Inner Member #2	1
19	2249	Inner Member #3	1
20	2250	Inner Member #4	1
21	2221	Jack Pad Mtg. Bolt 3/8 16 X 1 1/2	1
22	2216	Spacer Ring O Ring 4 3/4 X 1/8	1
23	2223	Lock Ring	1
24	2225	Hose Assembly	1
25	2226	Valve Block	1
26	2227	Valve Blk. Mtg. Bolt 5/16 18 X 7/8 Serrated	2
27	2228	Handle	
28	2229	Roll Pin 1 3/8 X 0.187	1
29	2230	Valve Body	2
30	2231	Valve Stem	2
31	2232	Valve Lock Cap	2
32	2233	Valve Spring	2
33 34	2234	O Ring 0.625	4 2
34 35	2235	O Ring 0.250 O Ring 3/32 Teflon	2
35	2236 2237	Pressure Relief Valve	2
30	2237	1/8 NPT Brass Allen Plug	
38	3101	Warning Label	
39	3201	Unitec Label	
40	3104	Rak Jak TBT2 Label	
40	3037	Serial Number Label	
42	2245	Handle Grip	2
43	2199	Carry Handle	
44	2277	Button Head Blk. 10-32 X 1/2	
45	2278	Nut Black 10-32	4
46	3052	Unitec Handle Label	
	4041	Operation & Parts Manual	

NOTE: PART NUMBERS IN GRAY BOXES ARE FIELD REPLACEMENT PARTS!

## **OPERATING AND WARNING INSTRUCTIONS**

#### WARNING indicates a WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Study, understand and follow all instructions before operating this device.
- Do not exceed rated capacity (2 tons).
- Do not overinflate, maximum air pressure (105 p.s.i).
- Lifting device only. Immediately after lifting, support the vehicle with appropriate means.
- Use only on hard level surface.

secure at lift point.

warning

of load.

GROUND SURFACE LE

CORRECT


Sharp object puncturing

 
(See Illustrations below)

Keep hands away from jack pad at all times.

- Lift only on areas of the vehicle as specified by the vehicle manufacturer.
- Only attachments and/or adaptors supplied by the manufacturer shall be used.
- Wear Safety goggles.
- Avoid contact with petroleum based products or chemicals of any kind.
- Avoid sharp objects near bag. Bag penetration will result in jack dropping without warning, which will result in serious injury or property damage.
- Failure to heed these markings may result in personal injury or property damage.

WRONG

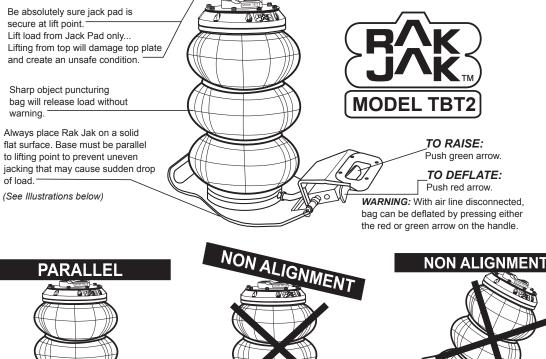




WRONG

GROUND SURFACE LEV

### **MAINTENANCE INSTRUCTIONS**

# Rak Jak<sup>™</sup> is designed for low maintenance, however please observe these suggestions...

#### Rak Jak Valve Block

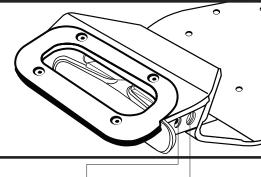

WARNING: AIR INLET: DO NOT Accepts Remove Your 1/4" Brass Plug NPT Fitting ©2006 ZENDEX TOOL CORPORATION, All rights reserved. Specific

Add a few drops of pneumatic tool oil to air inlet occasionally (monthly).

Visually inspect Rak Jak before each use. Do not use Rak Jak if you detect scars, abrasions, rips or punctures in air bag. If so, Rak Jak should be returned to factory for inspection and evaluation.

Return Address:



Citv\_

Date

# WARRANTY REGISTRATION CARD MODELTBT2

Please return this warranty and product update registration.

Purchased from:

Purchaser:

Address:

State

Rak Jak TBT2 is warranted to be free of defects in material and workmanship under normal use for two years from date of sale to user.

Any Rak Jak TBT2 or component part claimed to be defective during warranty period must be returned to your local Zendex jobber or distributor for inspection; transportation charges prepaid. The product must be properly tagged, stating nature of defect, customer's name, address, and date of purchase. Your local Zendex jobber will direct warranty claims to Zendex Tool Corp.

Any product or component determined defective by Zendex Tool Corp., due to normal use, will be repaired or replaced free of charge during warranty period and returned freight prepaid.

Warranty is void if equipment has been subjected to neglect, misuse, lack of proper lubrication, careless operation, faulty or deficient service, or if alterations or repairs have been made by someone other than an authorized representative, exclusive of normal maintenance.

**Acknowledged** 

TOOL CORPORATION American Tool Builders 4 Larson Drive Danbury, CT 06810 U.S.A.

Signature