


GoJak® Air™ Handle Assembly Instructions

*****PLEASE MAKE SURE THE AIR HOSE (PICTURED BELOW) IS PROPERLY TUCKED UNDER THE BLACK HANDLE GUARD. IF AIR HOSE IS KINKED OR CAUGHT BETWEEN BLACK HANDLE GUARD AND PURPLE TOP PLATE THE JACK WILL NOT OPERATE PROPERLY******

STEP 1: WHILE HOLDING HANDLE UPRIGHT GRAB AIR HOSE WITH HAND

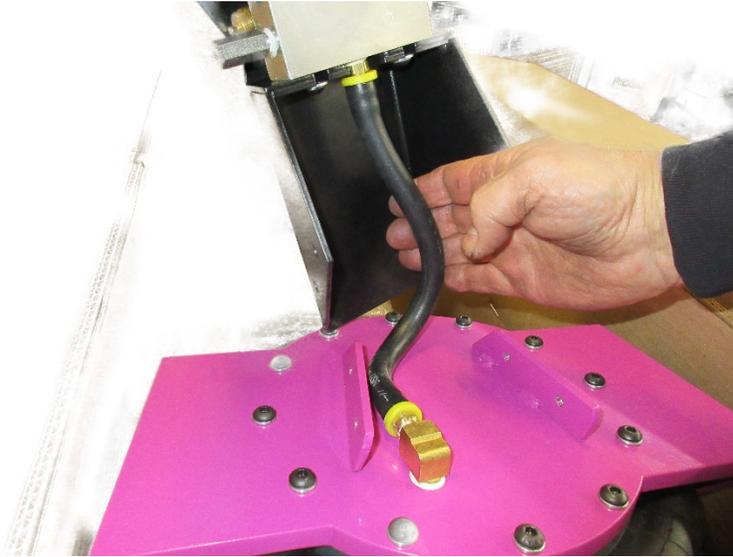

STEP 2: PULL AIR HOSE TOWARD YOU WHILE POSITIONING BOLT HOLES ON BLACK HANDLE GUARD

